



# TELESCOPIC LANCE

ASSEMBLY GUIDE

**CONTENT:**





**STEP 1. FEED THE HOSE THROUGH THE LANCE:**



**STEP 2.** FEED THE HOSE THROUGH THE PROTECTION SHIELD AND SECURE IT TO THE ALUMINUM TUBING:




**STEP 3.** CONTINUE CONNECTING TO THE GUN AND INSERT THE SAFETY PIN LOCKING IT IN PLACE:

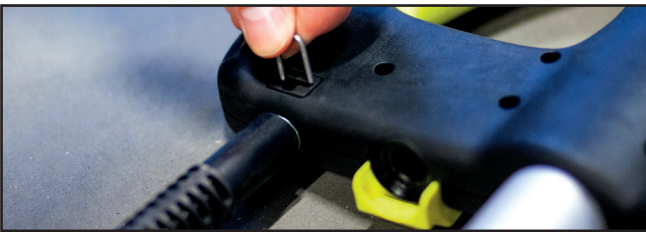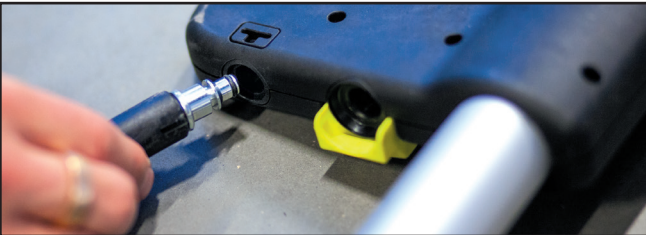

**THE TELESCOPIC LANCE IS READY. ATTACH A NOZZLE OR OTHER ACCESSORY AND START CLEANING! IF YOU PLAN ON USING DETERGENTS, FOLLOW THE NEXT STEPS.**


---

**YOU SHOULD HAVE FOUR ITEMS REMAINING: TWO HOSE CLAMPS, AN ADAPTER FOR KÄRCHER HOSE AND A DETERGENT HOSE.**

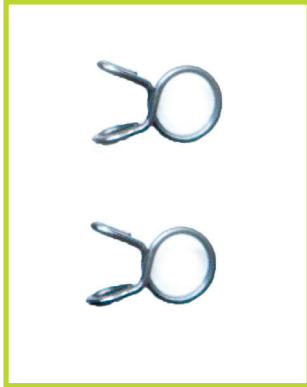

**ADAPTER ONLY NEEDED IF YOU HAVE A KÄRCHER PRESSURE WASHER. NO NEED WHEN YOU HAVE AVA. FITS MOST KÄRCHER MODELS AFTER 2009.**

**THE KÄRCHER ADAPTER IS VALUABLE IF YOU HAVE A KÄRCHER MACHINE AND/OR HOSE.**

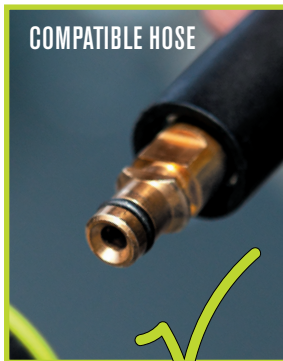

## THERE ARE TWO WAYS TO MOUNT THE FOAM CANNON AND BOTTLE


FOAM CANNON AND BOTTLE NOT INCLUDED IN TELESCOPIC LANCE

---


**OPTION 1.** NO NEED FOR THE DETERGENT HOSE. ADJUST THE AMOUNT OF SOAP BY TWISTING THE FOAM CANNON FRONT.




SECURE THE BOTTLE TO THE FOAM CANNON. CONNECT THE FOAM CANNON TO THE TIP OF THE TELESCOPIC LANCE. REMEMBER TO TIGHTEN THE YELLOW LOCK RING AFTER CONNECTING.

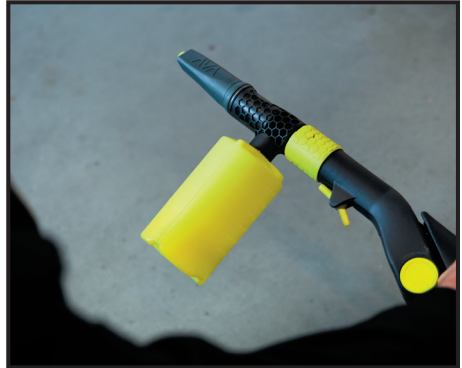

NO NEED FOR THE HOSE CLAMPS OR DETERGENT HOSE WITH OPTION 1

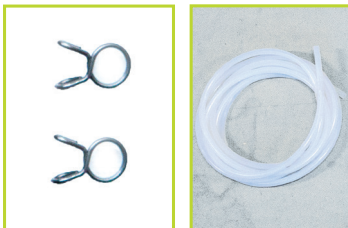

**OPTION 2.** THE DETERGENT HOSE FEEDS THE DETERGENT FROM THE BOTTLE IN ONE END TO THE FOAM CANNON IN THE OTHER. ADJUST THE AMOUNT OF SOAP WITH THE ADJUSTMENT KNOB. THIS ALTERNATIVE REDUCES THE AMOUNT OF WEIGHT AT THE TIP OF THE LANCE.

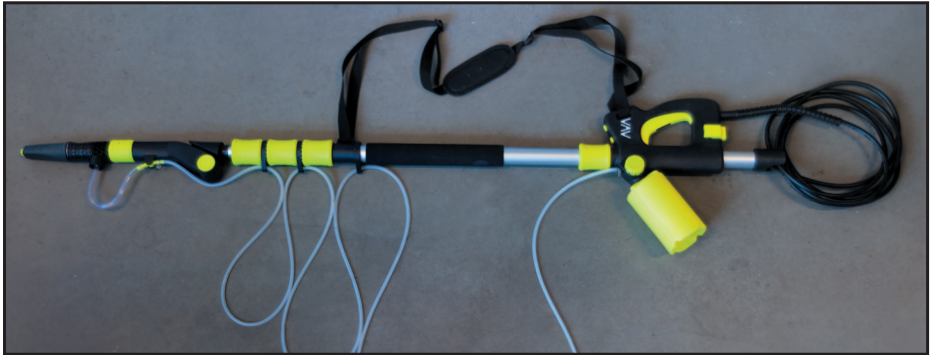

SECURE THE BOTTLE UNDERNEATH THE HANDLE AND CONNECT THE FOAM CANNON TO THE FRONT OF THE LANCE. ATTACH THE DETERGENT HOSE TO THE NIPPLES AT BOTH HANDLE AND NOZZLE ENDS.

THE HOSE FROM THE FOAM CANNON ALSO NEED TO BE CONNECTED TO THE NEAREST NIPPLE FOR THE DETERGENT TO BE ABLE TO REACH IT.

THE DETERGENT ADJUSTMENT AT THE END OF THE FOAM CANNON NEEDS TO BE ADJUSTED TO AN "OPEN" SOAP SETTING. THE SOAP RATIO CAN THEN BE REDUCED AT THE HANDLE END.



